




WL210 WIRELESS PCI CARD

QUICK INSTALL GUIDE



Notice

The information in this document is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN; NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL.

This document contains information protected by copyright. No part of this document may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation.

© 2001 Compaq Computer Corporation.

Compaq and the Compaq logo are registered in the U.S. Patent and Trademark Office. Windows, Windows NT, and the Windows logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Microsoft products are licensed to OEMs by Microsoft Licensing, Inc., a wholly owned subsidiary of Microsoft Corporation.

Product names mentioned herein may be trademarks and/or registered trademarks of their respective companies.

WL210 Wireless PCI Card Quick Install Guide
February 2001.

Table of Contents

Table of Contents	i
chapter 1: About 11 Mbps Wireless LAN	1-1
Kit Contents	1-1
Network Options	1-2
■ Peer-to-Peer Workgroup	1-2
■ Home Office Networking	1-4
■ Enterprise Networking	1-5
WL210 Wireless PCI Card Features	1-7
WL210 Wireless PCI Card Features	1-9
About the CD-ROM	1-10
Finding Information	1-11
chapter 2: Install the WL210 Wireless PCI Card	2-1
Configure the WL210 Wireless PCI Card	2-4
■ Installation for MS-Windows 2000	2-4
■ Installation for MS-Windows 98 & ME	2-5
■ Installation for MS-Windows 95	2-5
■ Installation for MS-Windows NT 4.0	2-6
Verify Proper Installation	2-7

chapter 3: Installation for Windows	3-1
Introduction	3-1
Insert your WL110 Wireless PC Card	3-3
Install Drivers	3-4
■ Before You Start the Installation	3-4
■ What You Need to Know	3-4
■ Driver Installation for Windows	3-5
Set Windows Network Properties	3-7
Wireless LAN Properties	3-8
■ Configuration Profile	3-9
■ Basic Settings	3-11
Finish the Installation	3-14
■ After Restarting Your Computer	3-15
chapter 4: Working with 11 Mbps Wireless LAN and Windows	4-1
Introduction	4-1
Use your WL110 Wireless PC Card	4-2
■ Radio Antennae	4-2
■ Remove the WL110 Wireless PC Card	4-2
■ Maintenance of your WL110 Wireless PC Card	4-4
View Other Computers	4-4
Using the Client Manager	4-6
■ View Wireless Link Quality	4-7
■ View/Modify WL110 Wireless PC Card Settings	4-8

chapter 5: Advanced Settings	5-1
Introduction	5-1
Advanced Parameters Tab	5-2
Admin Parameters Tab	5-4
appendix A: Card Specifications	A-1
Physical Specifications	A-1
■ WL210 Wireless PCI Card	A-1
■ WL110 Wireless PC Card	A-2
Electrical Characteristics	A-3
■ WL210 Wireless PCI Card	A-3
■ WL110 Wireless PC Card	A-3
Networking Characteristics	A-4
Regulatory Information	A-5
■ WL210 Wireless PCI Card	A-5
■ WL110 Wireless PC Card	A-5
Radio Characteristics	A-6
appendix B: Troubleshooting	B-1
■ LED Activity	B-1
■ Can Not Connect To The Network	B-6
■ LEDs Work But Can't Connect to Network	B-6

chapter 1

About 11 Mbps Wireless LAN

Kit Contents

The WL210 Wireless PCI Card kit includes:

- a. One WL210 Wireless PCI Card
- b. One WL110 PC Card.
- c. The “WL210 Wireless PCI Card Quick Install Guide”
- d. One Compaq 11 Mbps Wireless LAN CD-ROM.

The Quick Install Guide is an abstract from the electronic User’s Guide that is included on the CD-ROM.

Network Options


The WL210 Wireless PCI Card Kit enables you to:

- Connect your computer to a Peer-to-Peer workgroup of wireless computing devices (see Figure 1-1 on page 1-3).
- Connect your computer to a Small Office/Home Office (SOHO) network that includes a WL310 Gateway (see Figure 1-2 on page 1-4).
- Connect your computer to a Local Area Network (LAN) Infrastructure that includes Compaq access points (see Figure 1-3 on page 1-5 and Figure 1-4 on page 1-6).
- Expand the capabilities of your access points, to support wireless devices that have been equipped with Compaq wireless LAN adapters.

Peer-to-Peer Workgroup

The Peer-to-Peer workgroup configuration enables you to quickly set up a small wireless workgroup, where the workgroup participants can exchange files using features like “File and Printer Sharing” as supported by Microsoft Networking.

Figure 1-1 Peer-to-Peer Wireless Workgroup

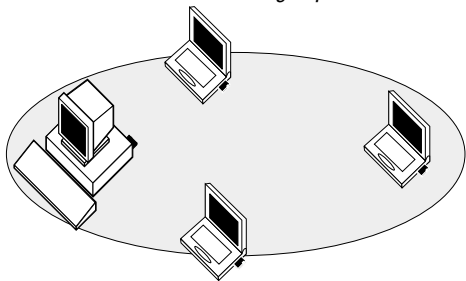


You can use this option to setup a temporary or ad-hoc network in environments where no access points are available (for example in Small Office/Home Office (SOHO) environments).

As long as the stations are within range of one another, this is the easiest and least expensive way to set up a wireless network.

Home Office Networking

With the Compaq WL310 Wireless Home Office Gateway, wireless access to the Internet or other computers is at your fingertips.

Figure 1-2 Connect to a Residential Gateway (RG)

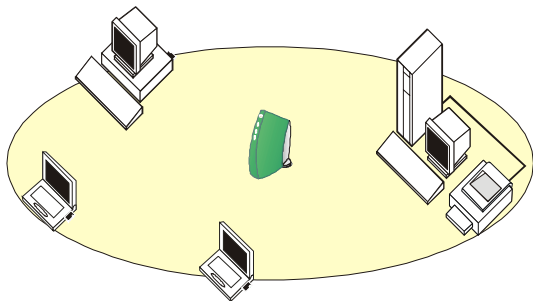


All you need to do is connect the wireless computers to the WL310 Gateway, and you are ready to:

- Share files and printers, and
- Access the Internet via the built-in modem of the WL310 Gateway.

Optionally the WL310 Gateway allows you to connect your wireless stations to previously installed wired computers and/or an external cable, an xDSL or a ISDN modem.

Enterprise Networking

Figure 1-3 Stand Alone Wireless LAN

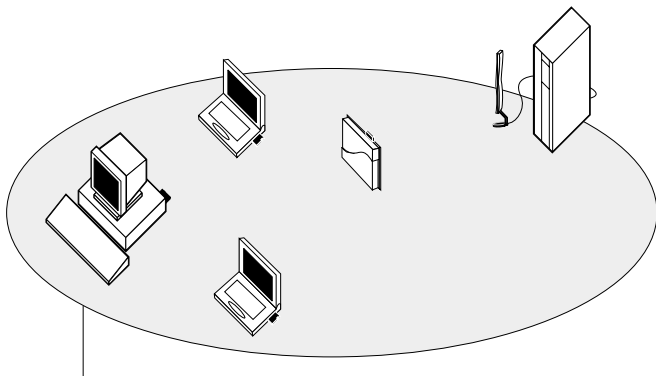


Network Name

With the WL410 Wireless SMB Access Point and/or WL510 Wireless Enterprise Access Point you can connect to a corporate Local Area Network (LAN) infrastructure to have wireless access to all network facilities.

LAN Infrastructures may either be:

- Stand-alone wireless LANs as pictured in Figure 1-3.
- Wireless network infrastructures connected to an existing Ethernet network as pictured in Figure 1-4 on page 1-6.

Figure 1-4 LAN Infrastructure

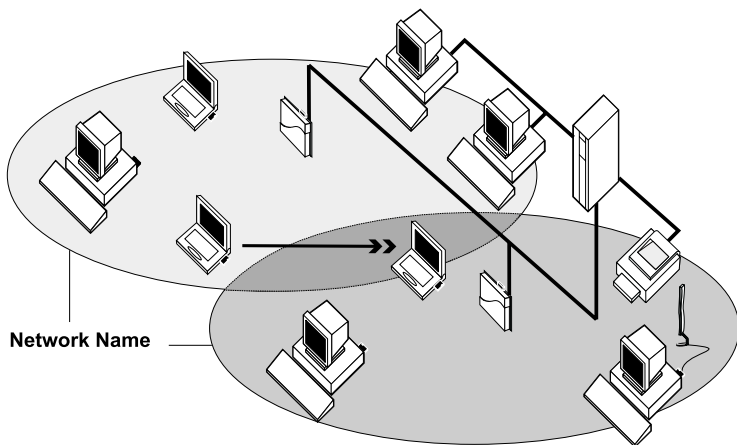

It's Easy

The WL210 Wireless PCI Card functions like any standard wired Ethernet card, but 11 Mbps Wireless LAN does not need any wires!

Where an Ethernet card requires a cable connection to a hub and/or patch panel, the cable physically ties you down to the location of the wired connection.

Compaq 11 Mbps Wireless LAN allows you to connect your computer to a Local Area Network (LAN) system from anywhere within the wireless coverage area. Expanding or re-designing your network is easy: Add or relocate access points, power-up your (new) wireless computers, and you're done!

Unlike Ethernet, wireless connectivity will enable you to roam throughout the network while remaining connected to the LAN.


Note: All Compaq 11 Mbps Wireless LAN products, are radio products. Refer to the flyer "Information to the User" for regulatory information that may apply in your country.

WL210 Wireless PCI Card Features

The WL210 Adapter is a wireless network card that fits into any standard PCI slot.

The WL110 PC Card has two LED indicators and two integrated antennas. Optionally you can use the WL110 PC Card in combination with an external antenna.

Figure 1-5 The WL110 Wireless PC Card

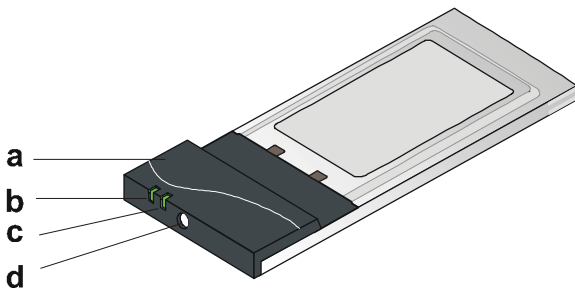

- a. Integrated Antennas
- b. Radio LED
 - ❑ Off - No wireless activity
 - ❑ Blinking - Sensing/transmitting wireless data
- c. Power ON/OFF LED
 - ❑ Solid Green - standard operational mode
 - ❑ Blinking Green - Power Management mode
- d. Connector for optional External Antenna.

WL210 Wireless PCI Card Features

The WL210 Adapter is:

- Wi-Fi (Wireless Fidelity) certified by the Wireless Ethernet Compatibility Alliance (WECA). This means that your 11 Mbps Wireless LAN hardware will communicate with other vendors' IEEE 802.11 compliant wireless LAN products.
- Fully compatible with any other wireless LAN system based on Direct Sequence Spread Spectrum (DSSS) radio technology that complies with the "IEEE 802.11 standard on wireless LANs (Revision B)".



The WL210 Adapter supports the following wireless LAN features:

- Automatic Transmit Rate Select mechanism in the transmit range of 11, 5.5, 2 and 1 Mbit/s.
- Automatic Frequency Channel Selection (2.4 GHz) allowing roaming over multiple channels.
- Card Power Management.
- 128-bit RC4 data encryption (also supports 64-bit RC4/Wired Equivalent Privacy - WEP).

About the CD-ROM

The CD-ROM contains both software and documentation for the WL210 Wireless PCI Card.

If you wish to install 11 Mbps Wireless LAN drivers and software, turn to chapter 3 “Installation for Windows”.

Note: Prior to copying or installing the software, you are advised to read the Software License Agreement “**LICENSE.TXT**”, located in the root folder of the CD-ROM. By installing, copying or using the software, you are consenting to be bound by this agreement. If you do not agree to all of the terms of the Software License Agreement, do not download, copy or install the software.

It is the policy of Compaq to improve products as new technology, components, software and firmware become available. Before you proceed with the installation of this product, visit our website at: **<http://www.compaq.com/support/files/networking/wlan/>** to:

- Verify if newer versions of the software that was shipped with your product are available.
- Download and install the latest software with your purchased product.

Finding Information

The Quick Install Guide was designed to give you a brief introduction about the WL210 Adapter and the Compaq wireless network system.

In this printed document you will find the most important information to get your wireless network up and running, with a minimum set of parameters for the MS-Windows 95/98, NT, 2000 and ME operating systems.

Context-sensitive help for the configuration menus and tools is available when you:

- Click the  button on your screen, or
- Press the  function key on your keyboard.

chapter 2

Install the WL210 Wireless PCI Card


To insert the WL210 Wireless PCI Card into your computer, carefully follow the following steps:

1. Shut down your computer.
2. Switch off the power of:
 - ❑ Your computer,
 - ❑ All external devices connected to your computer.
3. Disconnect the power cord from your computer and unplug all external devices from the wall outlets.


**DANGER:**

Failure to turn off and unplug your computer before removing the cover can result in personal injury or damage to the computer.

4. Remove the cover of your computer, according to the instructions in the documentation that came with your computer.
5. Select an available slot for your adapter and remove the metal filler strip (as pictured above). Keep the screw for fixing the adapter later.

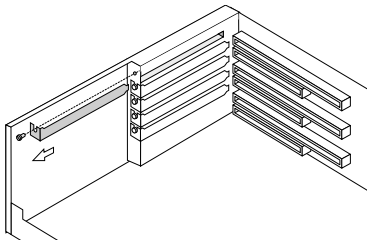

CAUTION: Electrostatic discharge may cause damage to your computer and/or WL210 Adapter. To avoid damage, first touch the metal chassis of your computer before you remove the WL210 Adapter from its anti-static bag and insert the WL210 Adapter into your computer.

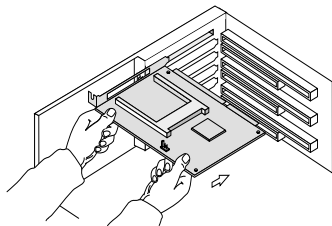

6. Gently insert the connector of the WL210 Adapter into the slot until the card is properly seated.
7. Secure the card into place with the screw that you removed in step 5.
8. Put the computer cover back into place according to the instructions in the user's guide that came with your computer.
9. Reconnect all the external devices to your computer.
10. Re-insert the power cords and connect them to the mains sockets.
11. Switch on the power of your computer to complete the hardware installation.

Configure the WL210 Wireless PCI Card

Most of today's Microsoft operating systems will automatically detect and configure the WL210 Wireless PCI Card hardware. Some of these operating systems however, may require you to install an additional driver (the PCI Enabler), to allow you to use the WL210 Adapter in combination with the WL110 Wireless PC Card.

Therefore, prior to inserting the WL110 PC Card into the PC Card slot of your WL210 Adapter, follow the installation instructions as described for your operating system to complete the installation of the WL210 Adapter.

Installation for MS-Windows 2000

Although the WL210 Wireless PCI Card will work fine in some computers running Windows 2000, most computer systems require the Microsoft Service Pack 1 update to allow "Interrupt Sharing" on the WL210 Adapter.

1. Update your Windows 2000 operating system using Microsoft's Windows 2000 Service Pack 1 or higher.

This Service Pack is available from the Microsoft website at <http://www.microsoft.com>.

2. Once you insert the WL210 Wireless PCI Card into your computer, the operating system will automatically detect the new hardware and enable the driver.

3. To verify if the installation was completed successfully, proceed as described on page 2-7.

Installation for MS-Windows 98 & ME

Upon (re)starting your computer, Windows 98/ME will automatically detect the adapter, and start the installation.

1. Follow the instructions on your screen, confirming the settings proposed by the operating system.
2. When prompted to restart your computer select **Yes** to complete the installation procedure.
3. To verify if the installation was completed successfully, proceed as described on page 2-7.

Installation for MS-Windows 95

Installing the WL210 Wireless PCI Card in Windows 95 requires you to install the “PCI Enabler” provided on the CD-ROM that came with your product.

1. Insert the CD-ROM that came with your WL210 Wireless PCI Card into your computer.
Your operating system will automatically start the CD.
2. Select your language
3. Click on “**Install Windows 95 PCI Enabler**”

4. Follow the instructions on your screen.
5. To verify if the installation was completed successfully, proceed as described on page 2-7.

Note: If the CD-ROM does not start automatically:

1. Click the Windows **Start** button
2. Select **Run**
3. Browse to the CD-ROM
4. Double-click the file “**Run_CD.exe**”

Installation for MS-Windows NT 4.0

Installing the WL210 Wireless PCI Card in Windows NT 4.0 requires you to install the “PCI Enabler” provided on the CD-ROM that came with your product.

1. Remove the WL110 Wireless PC Card from the WL210 Wireless PCI Card.
2. Start-up your computer and:
 - a. Check the blue start-up screen to verify which NT Service Pack is installed on the computer.
 - b. Log in as the “Administrator” of the workstation.

If the computer is running with Service Pack v3.0 or lower, download and install Service Pack v6a from the

Microsoft website (<http://www.microsoft.com>) prior to installing the WL210 Adapter.

3. Insert the CD-ROM that came with your WL210 Wireless PCI Card into your computer.

Your operating system will automatically start the CD.

4. Select your language
5. Click on “**Install Windows NT 4.0 PCI Enabler**”
6. Follow the instructions on your screen.
7. Shut down Windows and restart your computer.

When prompted to run diagnostics, click **yes** and wait for the computer to restart.

8. After the restart, insert the WL110 Wireless PC Card and click **OK** to install the WL110 PC Card driver.
9. Restart your computer and verify if the installation was completed successfully as described on page 2-7.

Verify Proper Installation

To verify proper installation of your WL210 Wireless PCI Card, proceed as follows:

1. On the Windows task bar click the Start button, point to **Settings** and then click **Control Panel**.

2. Double-click the **PC Card (PCMCIA)** icon and verify if the PC Card properties window correctly displays the WL110 Wireless PC Card hardware.

For Windows 95/98/2000 and ME, proceed with chapter 3 “Installation for Windows”.

chapter 3

Installation for Windows

Introduction

The installation of your WL110 Wireless PC Card for Windows consists of the following steps:

1. Insert the CD-ROM to install the Client Manager software (see page 3-2).
2. Insert your WL110 Wireless PC Card (see page 3-3).
3. Install drivers (see page 3-4).
4. Set the wireless LAN properties (see page 3-8).
5. Finish installation (see page 3-14).

Note: If you intend to use the WL110 PC Card in the WL510 Wireless Enterprise Access Point, please refer to the documentation that was shipped with the device. Alternatively you can download these

documents from our website at: <http://www.compaq.com/support/files/networking/wlan/>.

Install the Client Manager

The Client Manager program is a software tool that you can use to check the quality of your network connection.

Note: It is not mandatory to install the Client Manager program in order to establish a network connection, but it provides you with more options to:

- View/change the settings of your network connection.
- Monitor your network connection.

To install the Client Manager software, proceed as follows:

1. Insert the software CD-ROM that came with your WL110 Wireless PC Card kit into your computer.

Your operating system will automatically start the CD.

2. Select your Language
3. Click on “Install Compaq Client Manager”
4. Follow the instructions on your screen.

Note: If the CD-ROM does not start automatically:

1. Click the Windows **Start** button

2. Select **Run**
3. Browse to the CD-ROM
4. Double-click the file “**Run_CD.exe**”


Insert your WL110 Wireless PC Card

1. Unpack your WL110 Wireless PC Card kit and verify that all items are present, as described in “Kit Contents” on page 1-1.

If any of the items described appear to be damaged or missing, please contact your supplier.

2. Insert the WL110 PC Card into the PC Card slot of your computer as pictured in Figure 3-1.

Figure 3-1 Inserting the WL110 Wireless PC Card into Your Computer

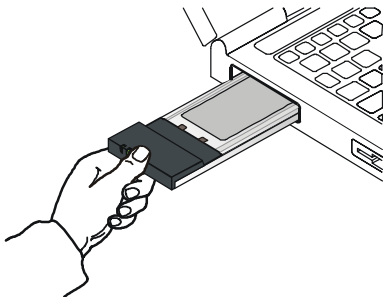

Install Drivers

Before You Start the Installation

Before you start the installation, you are advised to keep the Windows CD-ROM or software diskettes close at hand. If your computer came with a factory-installed Windows operating system, these files will be stored on your computer's hard disk, in the form of cabinet (*.cab) files.

What You Need to Know

Installing a WL110 Wireless PC Card requires the same level of expertise that you would need to install a standard Ethernet

network adapter card. It is assumed that you have a working knowledge of standard Windows operations and of installing network adapter cards. Refer to the Windows Help when necessary (on the Windows task bar, press the **Start** button and select **Help**).

Driver Installation for Windows

Most Microsoft Windows operating systems support “Plug & Play” for WL110 Wireless PC Cards. Once you insert the WL110 PC Card into your computer, these operating systems will automatically:

- Detect the card, and enable the driver, or
- Start the **Add New Hardware** wizard and prompt you to install the driver, when the operating system cannot find the required driver.

This would typically occur when inserting the 11 Mbps Wireless LAN WL110 Wireless PC Card into your computer for the very first time.

When Windows starts the **Add New Hardware** wizard:

1. Follow the instructions on your screen.
2. When you are prompted to locate the driver installation files, insert the Compaq CD-ROM and navigate to the folder that matches your operating system:

- ❑ Windows 2000: D:\Drivers\Win_2000
- ❑ Windows ME: D:\Drivers\Win_ME
- ❑ Windows 98: D:\Drivers\Win_98
- ❑ Windows 95: D:\Drivers\Win95
- ❑ Windows NT: D:\Drivers\Win_NT

When finished installing the drivers, Windows automatically opens the **Add/Edit Configuration Profile** window.


3. Continue with “Set Windows Network Properties” on page 3-7.

Note: If your computer does not detect the new hardware you can consult appendix B “Troubleshooting”.

Set Windows Network Properties

If this is the very first time that Networking support is installed onto your computer, the Windows operating system will prompt you to enter a computer and workgroup name. These names will be used to identify your computer on the Microsoft Network Neighborhood.

Figure 3-2 Windows Network Identification Properties

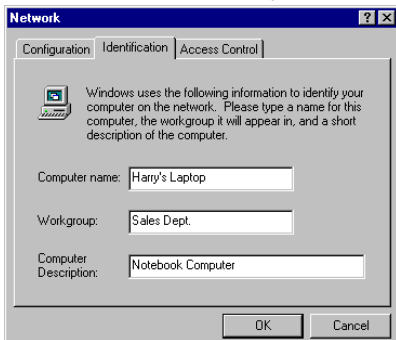


1. In the **Computer Name** field, enter a unique name for your computer.
2. In the **Workgroup** field, enter the name of your workgroup.
3. (Optional) Provide a description of the computer in the **Computer Description** field.

For more information about setting your Windows Network Properties, consult your Windows documentation or the Windows on-line help information.

Wireless LAN Properties

After installing the drivers, Windows will open the Add/Edit Configuration Profile window for your WL110 Wireless PC Card as pictured in Figure 3-3.

Figure 3-3 Add/Edit Configuration Profile window

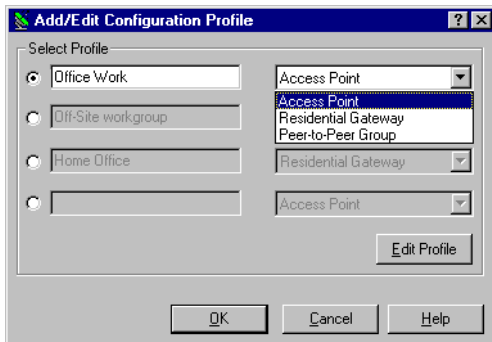

Configuration Profile

The Add/Edit Configuration Profile window enables you to specify one or more network connection profiles.

For example you can set up profiles for your office, your home or an ad-hoc workgroup to share files with your colleagues or friends while being “on the road”.

For more information about the different types of networks, refer to “Network Options” on page 1-3.

To connect your computer to a wireless network you will need to:


1. Assign a name to the network profile
2. Use the pull-down menu on the right to select how you wish to connect to the wireless network:
 - ☐ Via the WL410 Wireless SMB Access Point or WL510 Wireless Enterprise Access Point to connect to the corporate network
 - ☐ Via the WL310 Wireless Home Office Gateway, or
 - ☐ An ad-hoc peer-to-peer workgroup of wireless stations without access point.
3. Click the **Edit Profile** button to view/modify the parameters for the selected profile.

For first-time installations, you are advised to setup a single profile using only the Basic Settings.

Note: The number and type of parameters you need to specify may differ according to the selected connection type.

For information about the various options press the **(F1)** key or click the **Help** button.

Figure 3-4 Edit Configuration window

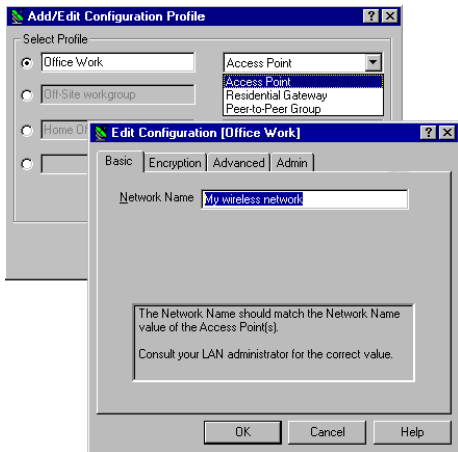

Basic Settings

To connect to a wireless network, all you need to specify is:

- A valid **Network Name**.
- (Optional) a valid **Encryption key**.

Network Name

The Network Name is a case-sensitive string of alphanumeric characters in the range of “a” to “z”, “A” to “Z” and “0” to “9”. It connects you to the wireless LAN, like a cable would connect a wired computer to an Ethernet LAN.

Valid values are subject to the type of network to which you wish to connect your computer:

- To connect to a WL310 Wireless Home Office Gateway, enter the 6-digit Network Name that is printed on a label at the bottom of the WL310 Gateway device.
- To connect to a Peer-to-Peer workgroup, enter the name as agreed upon by the workgroup participants.

If you wish to start a workgroup yourself, enter a name with a maximum of 32 alphanumeric characters, and share that value with your workgroup participants.

- To connect to an access point, such as the WL410 Wireless SMB Access Point or WL510 Wireless

Enterprise Access Point, enter the value as defined by your LAN Administrator.

This value should have a maximum of 32 alphanumeric characters.

Alternatively you may choose to enter the value “ANY” (all character upper-case) to connect to any IEEE 802.11 compliant wireless network in the vicinity of your computer.

Proceed with the Encryption Key settings, or click **OK** to confirm and return to the Add/Edit Configuration Profile window.

Encryption Key

To enhance the security of your wireless communications, you can also choose to enable wireless data encryption.

The encryption options differ according to the selected configuration profile (page 3-9).

CAUTION: To allow communication, all wireless devices should use identical encryption settings. As the encryption key is case-sensitive, make sure you enter it with care.

- When you selected to connect to a WL310 Wireless Home Office Gateway, you can enter one encryption key. The default Encryption Key matches the last 5 characters of the Network Name.

CAUTION: Do not modify this key unless you have already changed the encryption key of your WL310 Gateway.

- When connecting to a Peer-to-Peer workgroup, enter the key as agreed upon by the workgroup participants.
- When connecting to a corporate LAN via the Access Point profile, the encryption tab allows you to enter up to four different keys in either alphanumerical or hexadecimal format.

Enter the values as defined by your LAN Administrator.

Note: The keys should be entered in exactly the same order as in the access point.

Advanced Parameters

The Edit Configuration window also provides access to the advanced parameters in the Advanced and Admin tab.

You are advised to leave these parameters to their default settings, unless special situations require a change of these parameters. For a description of these parameters, consult the on-line help file or the “User’s Guide” on the CD-ROM.

Finish the Installation

When you have finished the “Wireless LAN Properties”, click the **OK** button to close the Add/Edit Configuration window and to proceed with the installation process. Windows will finish building the driver configuration database and copy some files to your computer’s hard disk.

- If the Windows operating system prompts you to identify the location of the Windows files, specify the drive and directory of the Windows Installation CD-ROM or diskettes.

When you had a WL110 Wireless PC Card installed on your computer before, most of these files are already available on your hard disk drive. If you do not have the Windows CD-ROM available, you may try replacing the proposed path in the Copy Files From dialog box with: “C:\Windows\System” or “C:\Windows\”

- If the Windows operating system prompts you to identify the location of driver files (typically file names starting with the characters w*.*) specify the drive and directory of the CD-ROM:
 - ❑ Windows 2000: D:\Drivers\Win_2000
 - ❑ Windows ME: D:\Drivers\Win_ME
 - ❑ Windows 98: D:\Drivers\Win_98

- ❑ Windows 95: D:\Drivers\Win95
- ❑ Windows NT: D:\Drivers\Win_NT

If you downloaded the files from the Internet, point to the disk drive or directory where you saved files.

When Windows has finished copying files, it will prompt you to restart your computer. Click **OK** button to complete the installation.

After Restarting Your Computer

After you have restarted your computer, the Windows operating system will:

1. Detect the WL110 Wireless PC Card (you can hear the two-tone sound of the PC Card Socket Controller).
2. Load the driver
3. Display a dialog box requesting you to enter a Windows user name and password.

The password you enter here will be the one used to login to the Windows Network Neighborhood.

Write down this password and keep it in a safe place.

Verifying installation

To verify if the installation of the drivers was completed successfully:

- Check if the Windows task bar displays the PC Card icon as pictured in Figure 3-5.
- Check the LEDs on your WL110 Wireless PC Card.
 - A steady green Power LED indicates the WL110 Wireless PC Card is active.
 - A flickering green Radio LED indicates wireless activity.

For other LED behavior see appendix B.

- (Optional) To check the quality of the network connection, start the Client Manager program as described in chapter 4 “Working with 11 Mbps Wireless LAN and Windows”.

Figure 3-5 PC Card icon on the Windows task bar



chapter 4

Working with 11 Mbps Wireless LAN and Windows

Introduction

This chapter provides general information on how to:

- Use your WL110 Wireless PC Card
- View Other Computers
- View Wireless Link Quality
- View/Modify WL110 Wireless PC Card Settings

Use your WL110 Wireless PC Card

Radio Antennae

The built-in radio and antennae of your WL110 Wireless PC Card perform best in an open environment with as few obstacles as possible.

- To achieve the maximum range for wireless communications do not cover the card with objects such as books or thick stacks of paper.
- If you are using the card inside a desktop computer you may consider the purchase of the optional Range Extender Antenna.

Remove the WL110 Wireless PC Card


If you do not need the wireless connectivity of your WL110 PC Card, you can remove the card from its slot as pictured in Figure 4-1.

CAUTION: When removing the WL110 PC Card you will lose your connection to the network. Prior to removing the WL110 PC Card, make sure you have closed all files and network applications (such as e-mail).

You are advised to always disable the WL110 PC Card **prior** to removing the card from the PC Card slot. This will allow the Windows operating system to:

- Log off from the network server
- Disable the driver
- Disconnect power to the PC Card slot (which will extend battery life for mobile computers).

Figure 4-1 Remove the WL110 Wireless PC Card

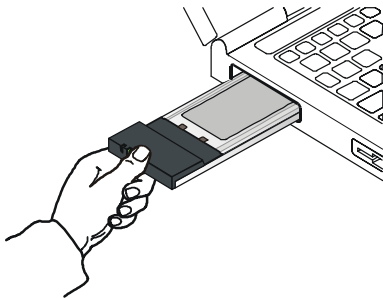

To stop using the WL110 PC Card:

1. Click once on the PC Card icon on the right side of the Windows task bar.
2. Select the option **Stop Compaq WL110 PC Card**.

3. Wait a few seconds until the operating systems displays a pop-up message to indicate you can safely remove the PC Card.

Alternatively, you can disable the WL110 PC Card via the PC Card icon on the Control Panel.

Maintenance of your WL110 Wireless PC Card

If you are not using the 11 Mbps Wireless LAN WL110 Wireless PC Card for wireless communications, extend its life by storing it inside the transparent plastic casing that was shipped with the product.

To clean the WL110 Wireless PC Card, gently wipe it with a soft (damp) cloth.

CAUTION: To avoid damage to the WL110 Wireless PC Card do not use abrasive materials, or rinse the card with liquids.

View Other Computers

When multiple 11 Mbps Wireless LAN stations are up-and-running in your wireless network, you can use the procedure described below to display the other computers:

1. Start Windows Explorer.

2. Scroll down the list of files and folders to look for the item **Network Neighborhood**.
3. Double-click the **Network Neighborhood** item to display all stations in your Microsoft Networking Group.
4. To display other workgroups in the network environment, double-click the **Entire Network** icon.

If you cannot find other (11 Mbps Wireless LAN) networked computers, verify whether the other 11 Mbps Wireless LAN computers are:

- Powered up and logged on to the network.
- Configured to operate with identical Microsoft Network settings concerning:
 - Networking Protocol.
 - Wireless Network Name
 - Workgroup Name

To view or modify the **Station Name** or **Workgroup** of your computer, proceed as follows:

1. Click the  **Start** button from the Windows task bar.
2. Click on **Settings**, and then on **Control Panel**.
3. In the Control Panel window, double-click the **Network** icon.

4. In the Network Settings window, select the **Identification** tab.

You can verify and change the **Station Name** or **Workgroup** parameters.

Note: You have to restart your computer before changes to the Network Settings will be effected.

To verify the radio connection with other stations refer to “View Wireless Link Quality” on page 4-7.

Using the Client Manager

If you installed the 11 Mbps Wireless LAN Client Manager as described in “Install the Client Manager” on page 3-2, you can use the Client Manager to:

- Verify the quality of your wireless connection to the network.
- View/Modify the configuration settings of your wireless WL110 Wireless PC Card.

The Client Manager will start automatically every time you power up your computer.

The Client Manager icon is displayed in the “System Tray” of your Windows task bar at the right-side on the bottom of your screen, indicating that the Client Manager program is running.



- Click the icon once with your **left** mouse button to retrieve a more detailed status overview.
- Click the icon once with your **right** mouse button to display a menu with more options.

View Wireless Link Quality

You can use the Client Manager icon on the Windows task bar to verify the link quality of your network connection.

An overview of all possible icons is given in Table 4-1. When the Client Manager icon is not indicating excellent or good radio connection, act as described in Table 4-1.

Table 4-1 Client Manager Icon

<i>Icon</i>	<i>Description</i>	<i>Color</i>
	Excellent radio connection	Green
	Good radio connection	Green
	Marginal radio connection: The radio signal is weak. Move closer to the: • 11 Mbps Wireless LAN access point, or • 11 Mbps Wireless LAN Base Station	Yellow

Icon	Description	Color
	Poor radio connection: The radio signal is very weak. Save your files and move closer to the: • 11 Mbps Wireless LAN access point, or • 11 Mbps Wireless LAN Base Station	Red
	No radio connection because: • Looking for initial connection, or • You have moved out of range of the network.	Red
	Peer-to-Peer network connection	Blank

View/Modify WL110 Wireless PC Card Settings


If you would like to view or modify 11 Mbps Wireless LAN parameters, for example because you would like to connect to another network or type of network, proceed as follows:

1. Right-click on the Client Manager  icon on the Windows task bar.
2. From the menu, select **Configuration Profile** (see Figure 4-2) and select:
 - ☐ **Add/Edit Profile** to add a new profile or to modify an existing profile.

- ❑ **One of the existing profiles** (if present) to select a profile without viewing or modifying the settings.

After selecting and another profile, the PC Card will use the selected profile to connect to the wireless network.

Figure 4-2 Edit Wireless Configuration Settings

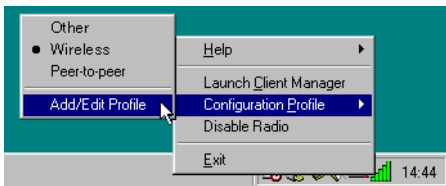

If your Client Manager icon is not visible, you have to start the Client Manager program again:

1. Click the  **Start** button from the Windows task bar.
2. Select **Programs**, and then select the **Compaq Wireless LAN** program group.
3. Next select **Client Manager** to start the Client Manager program.

Alternatively you can to change the WL110 Wireless PC Card configuration via the Control Panel:

1. Click the  **Start** button from the Windows task bar.

2. Click on **Settings**, and then on **Control Panel**.
3. In the Control Panel window, double-click the **Wireless Network** icon.
4. (Optional) Change the parameters you would like to modify, and click
 - ❑ the **OK** button to confirm your changes, or
 - ❑ the **Cancel** button to ignore your modifications.

chapter 5

Advanced Settings

Introduction

Although your WL110 Wireless PC Card will work fine in most network environment with the basic settings as described on chapter 3 “Installation for Windows”, you may wish to explore the advanced parameters options as displayed on the Configuration window for your adapter.

Advanced parameters are available only in the configuration profiles that connect to an access point.


Consult your LAN Administrator for information about whether these parameters apply to your situation.

For more information consult your LAN Administrator. You can also refer to the help file and the “11 Mbps Wireless LAN Manager Suite User’s guide”.

Advanced Parameters Tab

This tab of the Edit Configuration window allows you to adjust a number of parameters related to the performance of your wireless adapter.

Figure 5-1 Setup Advanced Parameters

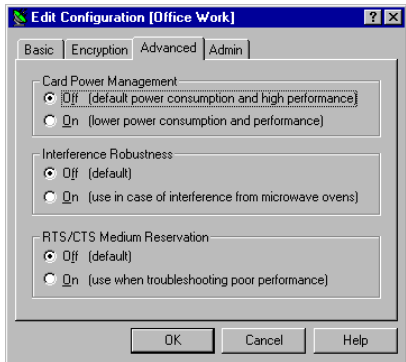


- Card Power Management allows you to extend the battery life of (mobile) wireless devices.
- Interference Robustness allows you to remedy slow performance related to in-band interference from devices like microwave ovens.

- RTS/CTS Medium Reservation controls the deferral behavior of wireless devices. Enabling this option may improve reliability of the network when:
 - many wireless stations operate in an environment with relatively few access points, and
 - network performance is poor network due to excessive frame collisions at the access points.

Admin Parameters Tab

The Admin parameters tab allows LAN Administrators to ensure that your adapter settings match specific settings that apply to the entire network.

Figure 5-2 Setup Admin Parameters

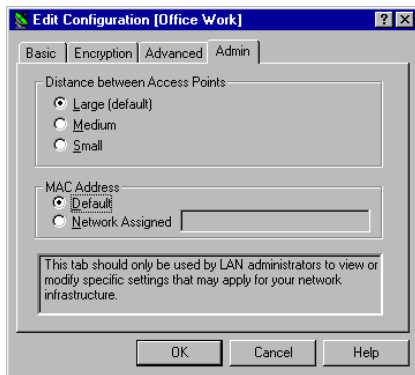

- Distance between Access Points allows you to control network performance in relation to the number of access points in your network.
- MAC Address allows you to assign a local MAC address to your adapter in case your network operating system requires local addressing.

appendix A

Card Specifications

Physical Specifications

WL210 Wireless PCI Card

<i>Form Factor</i>	Single slot adapter card for Type-II PC Cards (no ejector)	
<i>Dimensions</i>	(LxW)	160x98 mm
<i>Temperature & Humidity (non condensing)</i>		
<i>Operation</i>	0° to 55° C	maximum humidity 95%
<i>Transit</i>	-20° to 60° C	humidity 15 to 95%
<i>Storage</i>	-10° to 60° C	humidity 10 to 90%

WL110 Wireless PC Card

Form Factor	WL110 Wireless PC Card Type-II Extended	
Dimensions	(LxWxH)	117.8 x 53.95 x 8.7 mm
Weight	45 gram (PC Card)	
Temperature & Humidity (non condensing)		
Operation	0° to 55° C	maximum humidity 95%
Transit	-20° to 70° C	humidity 15 to 95%
Storage	-10° to 60° C	humidity 10 to 90%

Although the WL110 Wireless PC Card may still operate in the range of -20° to 70°C, operation outside the range of 0° to 55° C may no longer be according to specifications

Electrical Characteristics

WL210 Wireless PCI Card

<i>PC Card Bus</i>	16 bit, 5V (compliant with the R2 PC Card interface defined in the 1995 PC Card standard).
<i>PCI bus</i>	PCI Local Bus (compliant with the PCI Local Bus Specification Revision 2.1)
<i>Chipset</i>	• PCI to Cardbus bridge TI 1410 • Power interface TI TPS2211
<i>Power Supply</i>	5 V taken directly from PCI bus

WL110 Wireless PC Card

<i>Doze Mode</i>	10 mA
<i>Receive Mode</i>	180 mA
<i>Transmit Mode</i>	280 mA
<i>Power Supply</i>	5 V

Networking Characteristics

Compatibility	• IEEE 802.11 Standard for Wireless LANs (DSSS) • Wi-Fi (Wireless Fidelity) certified by the Wireless Ethernet Compatibility Alliance (WECA).	
Host Operating System	Microsoft Windows® 95:	
	• NDIS3 Miniport Driver	
	Microsoft Windows® NT v4.0:	
	• NDIS4 Miniport Driver	
	Microsoft Windows® 98/ME and 2000:	
	• NDIS5 Miniport Driver	
Media Access Protocol	CSMA/CA (Collision Avoidance) with Acknowledgment (ACK)	
Data Rate	• High	11 Mb/s
	• Medium	5.5 Mb/s
	• Standard	2 Mb/s
	• Low	1 Mb/s
The cards use an automatic Transmit Rate Select mechanism.		

Regulatory Information

WL210 Wireless PCI Card

EMC Compliance	USA	FCC CFR47 Part 15-B, class B
	Europe	• 89/336/EEC, EMC Directive incl. CE Mark • EN 55022, Class B (Emissions) • EN 50082-1 (Immunity)
	Japan	VCCI Standard Class B (Emissions)
Product Safety	USA	UL 1950, UL Listed
	Europe	EN60950
	Japan	IEC 950

WL110 Wireless PC Card

Wireless communication is often subject to local radio regulations. Although wireless networking products have been designed for operation in the license-free 2.4 GHz band, local radio regulations may impose a number of limitations to the use of wireless communication equipment.

Note: Refer to the flyer “Information to the User” for more regulatory information that may apply in your country.

Radio Characteristics

R-F Frequency Band	2.4 GHz (2400-2500 MHz)	
Supported sub-channels	1	2412
	2	2417
	3	2422
	4	2427
	5	2432
	6	2437
	7	2442
	8	2447
	9	2452
	10	2457 (default)
	11	2462
Modulation Technique	Direct Sequence Spread Spectrum CCK 11 & 5.5 Mb/s, DQPSK for 2 Mb/s and DBPSK for 1 Mb/s	
Spreading	11-chip Barker Sequence	
Bit Error Rate (BER)	Better than 10^{-5}	
Nominal Output Power	15 dBm	
Encryption	128-bit (RC4), also supports 64-bit RC4/WEP (Wired Equivalent Privacy)	

Range/Transmit Rate	11 Mb/s	5.5 Mb/s	2 Mb/s	1 Mb/s
Open Office	160 m (525 ft.)	270 m (885 ft.)	400 m (1300 ft.)	550 m (1750 ft.)
Semi-Open Office	50 m (165 ft.)	70 m (230 ft.)	90 m (300 ft.)	115 m (375 ft.)
Closed Office	25 m (80 ft.)	35 m (115 ft.)	40 m (130 ft.)	50 m (165 ft.)
Receiver Sensitivity	-83 dBm	-87 dBm	-91 dBm	-94 dBm
Delay Spread (FER of <1%)	65 ns	225 ns	400 ns	500 ns

The range of the wireless signal is related to the Transmit Rate of the wireless communication. Communications at lower Transmit range will travel larger distances.

Note: The range values listed above are typical distances as measured at the Compaq 11 Mbps Wireless LAN laboratories. These values may provide a rule of thumb and may vary according to the actual radio conditions at the location where the 11 Mbps Wireless LAN product will be installed.

The range of your wireless devices can be affected when the antennas are placed near metal surfaces and solid high-density materials.

Range is also impacted due to “obstacles” in the signal path of the radio that may either absorb or reflect the radio signal.

The listed ranges are typical values when used indoors in “office environments” that can be described as follows:

- In Open Office environments, antennas can “see” each other, i.e. there are no physical obstructions between them.
- In Semi-open Office environments, work space is divided by shoulder-height, hollow wall elements; antennas are at desktop level.
- In Closed Office environments, work space is separated by floor-to-ceiling brick walls.

Auto Channel Selection

When installing WL110 Wireless PC Cards the channel configuration is managed as follows:

- For wireless clients that operate in an 11 Mbps Wireless LAN Infrastructure, the WL110 Wireless PC Card will automatically start operation at the channel identified by the access points. When roaming between different access points the station can dynamically switch to another channel if required.
- For WL110 Wireless PC Cards installed into wireless clients that operate in an “Peer-to-Peer” mode, the WL110 PC Card will default use channel 10.
- When inserted into the WL510 Wireless Enterprise Access Point, the WL110 PC Card will use the factory-set default channel (printed in bold), unless the LAN Administrator selected a different channel when configuring the access point device.

appendix B

Troubleshooting

LED Activity

If you encounter difficulty using and/or installing your 11 Mbps Wireless LAN product, the error may be related to various causes:

- Out-of range situation, which prevents the WL110 PC Card from establishing a wireless connection with the network.
- Configuration mismatch, which prevents the WL110 PC Card from establishing a wireless connection with the (correct) network.
- Absence of, or conflict of the 11 Mbps Wireless LAN Driver.

- A problem or conflict with the PC Card slot which prevents the WL110 Wireless PC Card from powering on.
- A conflict of the hardware with another device.

The starting point to troubleshoot problems with your wireless network is looking at the LED activity of the WL110 PC Card.

Table B-1 provides an overview of the various modes of operation and the associated LED activity. It also includes a number of troubleshooting hints, that may help you solve the problem.

Table B-1 LED Activity

Power LED	Radio LED	Description/Action
Continuous Green	Blinking	Standard operational mode. • Card is powered on. • Sensing/transmitting wireless data.
	Off	• Card is powered on. • No wireless activity. No action is required.
Flicker	Flicker	Power Management mode: • Card is powered on, but set to power saving mode, to conserve battery life. • Flashes indicates that the card wakes up at regular intervals to verify if there is wireless data addressed to your computer.

<i>Power LED</i>	<i>Radio LED</i>	<i>Description/Action</i>
Both LEDs blink once every 10 seconds		The WL110 PC Card works fine, but did not yet succeed establishing a wireless connection with the wireless Infrastructure. Actions: • Contact the LAN Administrator to verify the Network Name assigned to the wireless infrastructure. • Contact the LAN Administrator to verify the correct value(s) of the encryption keys. • Contact the LAN Administrator to verify whether the network infrastructure has been set to deny “ANY” as valid Network Name (Closed Network). • Change the configuration of your WL110 PC Card to enter the correct Network Name • If there are no access point devices available, change the configuration of your WL110 PC Card to run in “Peer-to-Peer” mode.

Power LED	Radio LED	Description/Action
Off	Off	Card is not powered on, so it can not transmit/receive data. The cause may either be: • No Driver loaded/installed • Card - Driver mismatch which prevented the driver from loading • Device conflict which prevented the driver from loading Actions: • Verify if a driver has been installed, if not install the driver. • View/Modify the device settings of the WL110 PC Card to determine/resolve the occurrence of a conflict with another device • Verify the versions of the driver, and the embedded software in the WL110 PC Card (also referred to as Station firmware). • Check our website at: http://www.compaq.com/support/files/networking/wlan/ to download and install the latest embedded software and driver.

Can Not Connect To The Network

If your WL110 PC Card seems to be working fine, but you are not able to connect to the network, this error might be due to a configuration mismatch.

For example if both LEDs of your WL110 PC Card blink once every ten seconds, the problem is likely to be caused by a configuration mismatch of:

- Network Name
- Encryption Key

The 11 Mbps Wireless LAN Network Name is case-sensitive.

LEDs Work But Can't Connect to Network

If you can not connect to the network while the LEDs indicate that the network is working properly (Power LED is on, Radio LED blinks) your problems might be caused by:

- Incorrect TCP/IP settings for your wireless network adapter (“Changing TCP/IP Settings” on page B-7).
- Your Windows operating system requires an update with a Microsoft Service Pack “Install Windows 2000 Service Pack” on page B-10).

Note: Some older versions of the Windows 95 operating system will not automatically install the necessary TCP/IP network protocol.

Changing TCP/IP Settings

Consult your LAN Administrator for the values of your TCP/IP settings.

To change the TCP/IP Settings:

1. On the Windows task bar click the **Start** button
2. Select **Settings** and then select **Control Panel**.
3. On the Control Panel window, double click on the **Network** icon to view the **Network Properties**.
4. From the list of installed components, check if the **TCP/IP** -> **Compaq WL110 PC Card** protocol is installed.
 - ❑ If this protocol is not yet installed, click the **Add** button and select the **TCP/IP** protocol from the list. Refer to the Windows Help for more information.
 - ❑ If this protocol is installed, select this protocol and click the **Properties** button. Check if the parameters resemble the settings provided by your LAN Administrator. Make Changes if necessary, and click **OK** when you're done.
5. When prompted, restart your computer.

Static IP Addressing for Peer-to-Peer networks

In networks with Static IP addressing, the network administrator manually assigns an IP address to each computer. Once a Static IP address is assigned, a computer uses the same IP address every time it reboots and logs on to the network, unless you manually change the IP address in the **Network Properties** dialog box. Networks using Static IP addresses are easy to set up and do not require additional network management software.

A Peer-to-Peer network environment is best suited for **Static IP addressing**, because of its simplicity.

Peer-to-Peer networks are also not likely to have a DHCP server already set up on the network.

Configure TCP/IP Settings for Static IP Addressing

Note: This IP configuration should only be applied to wireless networks that do not have a DHCP server installed.

1. Right-click **Network Neighborhood** on your desktop.
2. Select **Properties** from the pop-up menu to display the **Network Properties** dialog box.
3. Select the **Configuration** tab, and click **TCP/IP Compaq WL110 PC Card**.

4. Click **Properties** to display the **TCP/IP Properties** dialog box.
Make sure the **Specify an IP address** option is selected.

Note: In accordance with private IP addressing you can use IP addresses from **192.168.0.1** to **192.168.0.254** with the Subnet Mask of **255.255.255.0**.

- Each computer on the network must have a unique IP address. It is best to assign the value **192.168.0.1** to the first computer, **192.168.0.2** to the next computer and so on.
 - All computers on the network must use the same Subnet Mask value **255.255.255.0**.
5. Click **OK** to return to the **Network Properties** dialog box.
 6. Select the **Identification** tab.
 - a. In the **Computer Name** field, create a unique name to identify the computer.
Each computer on the network must have a unique computer name.
 - b. In the **Workgroup** field, create a workgroup name.
This name is the same for all computers on the wireless network.
 - c. In the **Computer Description** field, you can enter a detailed description for the computer.

7. Click **OK** when completed. Click **Yes** to restart the computer with the new network settings.

Install Windows 2000 Service Pack

If you can no connect a Windows 2000 computer to the network while the LEDs indicate your wireless adapter is working properly (Power LED is green, the Radio LED flickers and Client Manager shows a wireless connection) the computer probably has not been updated to Service Pack 1.

1. Insert the software CD-ROM that came with your WL210 Wireless PCI Card kit into your computer.

Your operating system will automatically start the CD.

2. Select your Language
3. Click on “**Windows NT/2000 Service Packs**”
4. Follow the instructions on your screen.

Note: If the CD-ROM does not start automatically:

1. Click the Windows **Start** button
2. Select **Run**
3. Browse to the CD-ROM
4. Double-click the file “**Run_CD.exe**”